



USER MANUAL


EDYSON 1



Please refer to this manual before using the smartwatch

1. CHARGING AND ACTIVATION

Before using your device for the first time, charge it to 100%. To charge your device, plug the charging cable into the adaptor or a USB port on your computer.

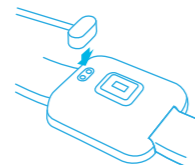

2. DOWNLOAD THE APP

Scan the following QR code to download and install the app.



01

3. PAIRING AND CONNECTION

- Open the Da Fit app to set up your profile.
- Go to "Device" and click on "Add a Device".
- Choose your device from the list that appears.
- Your device is now successfully paired.

The MAC address in the "About" section in settings can help you identify your device from the scanning list. After connecting SENS 1 with the Da Fit app, go to your phone's Bluetooth settings, add Audio SENS 1, and allow access to your contacts and call history.

If you face any disconnectivity, kindly follow these steps:

- Open "Settings" on your phone.
- Search and select "Phone Battery Usage" / "Optimize Battery Usage" / "App Standby Optimiser".
- Search and select Da Fit app.
- Now select either "Un-Optimised" / "Un-Check" / "Not Allow" / "Turn Off Setting".

Note: The aforementioned steps may not align with smartphones of certain brands. In case of which, the user will have to find similar settings and allow the application to run in the background. We also recommend the user to not close the application running in the background.

02

4. PHONE CALL

After connecting the smartwatch to your phone, you can use the watch dial feature to make and answer calls. You can also access your call history on the watch. You will need to ensure a stable connection between your phone and watch, and "Audio SENS 1" must be connected while managing phone calls.



5. SMARTWATCH FEATURES

SLEEP

If you choose to wear your smartwatch while sleeping, it can track the number of sleeping hours and your quality of sleep as statistics. This will be available for you to see on both your watch and the app.

NOTE: Sleep statistics reset to zero at 8:00 pm.



03

HEART RATE MONITOR


The smartwatch can record your heart statistics all throughout the day. You can also tap on the screen to start measuring your heart rate.



STEPS

Your smartwatch automatically tracks the steps taken and displays the data on the screen.

NOTE: Movement statistics reset to zero at midnight.

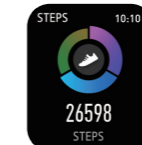

SPORTS

Tap on the training icon on the menu to start a new training session to start recording it. There are 11 sports modes for you to choose from. The last training recorded will be shown on the "training page".



04

WEATHER


The smartwatch can show the weather info for 'Today' and 'Tomorrow' on the weather page. Weather info is synced after connecting with the app. It will not be updated after being disconnected for a long time.



SMART NOTIFICATIONS

The smartwatch can sync incoming notifications from Twitter, Facebook, WhatsApp, Instagram, etc. Up to 5 recent messages can be stored.

Note: You can switch the incoming notifications on/off in the app.

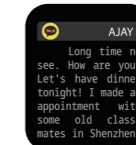

REMOTE SHUTTER


The smartwatch can control your phone remotely.



05

MUSIC PLAYER

The smartwatch can control your phone's music, remotely.

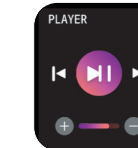


SpO2 MONITOR

Tap the SpO2 screen to start measuring your SpO2 levels. On the SpO2 screen, it will show the last SpO2 data measured.



STOPWATCH

You can tap on the "Start" button to start the timer, and tap on the "Stop" button when you want to stop it.

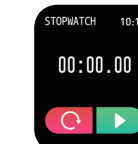

06



Thank you for choosing
SENS Smartwatch




www.sensworldwide.com
Customer Care Number: 1860-419-4111
Customer Care Support: care@sensworldwide.com

07

ALARM

The app allows you to set up multiple alarms. The smartwatch will vibrate when it's time for an alarm to start off.

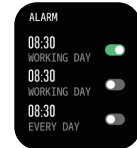

THEATRE MODE

The smartwatch will turn off its vibration and turn down the brightness once you switch on "Theatre Mode."
Note: You can turn the "Theatre Mode" on / off in the "Control Center" function.



SEDENTARY ALERTS

The smartwatch will vibrate to remind you to stretch / move around after every hour of sitting still.
Note: You can turn these sedentary alerts on / off in the app.



WATER REMINDER

The smartwatch will remind you when it's "Time to Drink Some Water" at your scheduled time.
Note: You can customise this feature to your liking in the app.



MENSTRUAL TRACKER

This feature helps you track your menstrual and ovulation cycle, for you to plan your future easily.



AI VOICE ASSISTANT

The smartwatch is equipped with Google and Siri voice assistants.



08

6. STEPS TO USE AI VOICE ASSISTANT

- Connect audio BT of the watch with your smartphone. (Refer to point 3)
- Go to AI voice in the watch.
- Now tap on the watch screen and speak. (Example: OK Google or Hey Siri).
- Give any command you would like the AI voice to perform. (Example: Tell me a joke, Tell me about the weather).
- Check the feature and it's working on your phone.

7. KNOW YOUR DEVICE

1. Water-Resistant

The smartwatch is water-resistant, which means it is rain-proof and splash-proof and can withstand even the sweatiest of workouts.

NOTE: Do not swim with your smartwatch. We also don't recommend showering with your smartwatch, even though the water won't damage the device. Wearing it 24/7 does not give your skin a chance to breathe. Whenever you get your smartwatch wet, dry it thoroughly before putting it back on.

09

2. Quick View

Check the time or your messages on the smartwatch by simply turning the screen towards yourself.

3. Environmental Conditions

Operating temperature: 14 F to 122 F (-10 C to 50 C)

4. Size Guide

Ideal to fit wrist sizes between 5.5 to 7.7 inches.

5. Disposing and Recycling

It's the consumer's to properly dispose of or recycle the smartwatch. Electronic items should be discarded separately at electronic equipment facilities. For more information, contact your local e-waste management authority.

8. PRECAUTIONS

1. Install only one app on your phone to ensure data synchronisation and steady connections.
Note: In case of a notified error on android devices, tap on "Install unknown App" for its successful integration.

10

2. To avoid missing out on daily updates, allow the app access to keep you notified. This does not limit your device's functionality and helps your device stay up to date.

3. Ensure that the mobile app is running in the background. Steps to keep the app running in the background (Android devices only)*:
 - i) Long-press the app icon
 - ii) Go to the app info
 - iii) Tap on battery usage
 - iv) Allow background activity
 *May vary from device to device

4. Monitoring the heart rate requires optimum fastening of the watch. Ensure that the device isn't too tight or loose for accurate sensor monitoring.

5. To avoid any physical damage to the device, make sure it doesn't collide with any sharp or hard objects.

6. Make sure you use the correct charger for the product. To avoid any damage and prevent short-circuiting, ensure the charger is kept away from moisture.

7. This product is an electronic monitoring data that provides information for daily reference. The data should not be used for medical purposes.

9. ROHS DECLARATION

Declaration of Conformity with the requirements of the e-waste Management Rules, 2011 (adopted by Notification S.O.1035 (E) of the Ministry of Environment and Forests). The Product conforms to the requirements of Rule 13 of the e-waste Rule.

11

The content of hazardous substances with the exemption of the applications are listed in SCHEDULE II of the e-waste rules:

1. Lead (Pb) - not over 0.1% by weight;
2. Cadmium (Cd) - not over 0.01% by weight;
3. Mercury (Hg) - not over 0.1% by weight;
4. Hexavalent chromium (Cr6+) - not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) - not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) - not over 0.1% by weight.

E-Waste (Management & Handling):

According to Waste of Electrical & Electronics Equipment (WEEE) the directive, WEEE should be separately collected and treated. If, at any time in future, you need to dispose of this product, please DO NOT discard it with household waste. Please send this product to WEEE points near you. The ♻️ marking/ symbol on the product or carton indicates that the product and its accessories/parts (e.g. battery travel charger, hands-free, etc.) should not be disposed of with other household waste at the end of its working life. Please separate these items from other types of waste and recycle them responsibly for the conservation of the environment and collective well-being.

E-Waste Recycling Program:

We have tied up with government-approved recyclers for facilitating the collection of e-waste from our channel partners and customers for recycling. You are simply required to call our customer care number 1860-419-4111, and our representatives will direct you to your nearest authorized service centre. You can drop the device/ accessories at the e-waste box after inspection by the concerned person.

12